

Lab Companion

▶ **On-Line High And Low Temperature Test Chamber TC-150**

Custom Solution

▶ **Brief Introduction**



High temperature and high humidity Test Chamber is suitable for the adaptability test of electricians, electronics, instruments and other products, parts and materials for storage, transportation and use in high and low temperature alternating humidity and humidity environment. It is the reliability test equipment for cold resistance, heat resistance, humidity resistance, dry resistance, and high temperature resistance of optical fiber, LCD, crystal, inductance, PCB, battery, computer, mobile phone and other products.

Lab Companion

Technical Features:

Dimensions (mm)	Width	Height	Depth
Useful	600	500	500
Overall	870	1810	1150

Homogeneity and Regulation:

Temperature range

from -70°C to +150°C

Temperature fluctuation:

≤±0.5°C

Temperature deviation:

≤±2.0°C

Temperature uniformity:

≤2°C

Temperature rise time:

3.0°C/min (-40°C→ +85°C) The whole process of nonlinear heating)

Temperature drop time:

3.0°C/min (85°C→-40°C) The whole process of nonlinear cooling)

Power supply specifications:

AC 220 V, 50/60 HZ, 1 φ 3 wire

Rated current:

AC 18 A, power 4 KW

This machine is dedicated to the above marked power supply, please use according to the rated power distribution. If the use area is changed, please contact our company.

Lab Companion

Appearance Introduction and Description:

1. Front and side of the machine



Number	Name	Illustration
1	Tricolor light	Green light means running, yellow standby, red fault
2	Controller panel	The intelligent operating panel
3	Test hole	An external power supply can be plugged in from the test hole for live product testing
4	Door lock	Pull on the handle to open the door
5	Glass window and operating holes	To observe the workings of the inner studio, convenient for customers to frequently pick up products

Lab Companion

2. Control panel



Number	Name	Illustration
1	Controller	Touch screen programmable controller
2	Over temperature setting	To Set the upper temperature limit in the test area
3	The USB interface	Used to copy data related to curves or documents.
4	Power switch	To control panel power
5	Lighting switch	To observe window

Lab Companion

3. Test area



Number	Name	Illustration
1	Thermal resistance sensor	Used for panel overtemperature sensing the temperature of the inner chamber
2	Thermal resistance sensor	Used for the controller to sense the temperature of the inner chamber
3	Air outlet	Test area circulates air outlet
4	Sealant	Heat preservation and air leakage prevention
5	Sample rack track	Used to secure the sample holder
6	Sample holder	Used to place test products

Lab Companion


4. The cooling machine room



Number	Name	Illustration
1	Pressure protection controller	When the pressure in the pipeline is too high or too low, the controller will alarm
2	Compressor	Compression refrigeration
3	Filter dryer	Remove debris from the cooling system
4	Oil separator	Separate refrigerant and refrigerant oil
5	Condenser	Cooling refrigerant

Lab Companion

5. Power distribution room

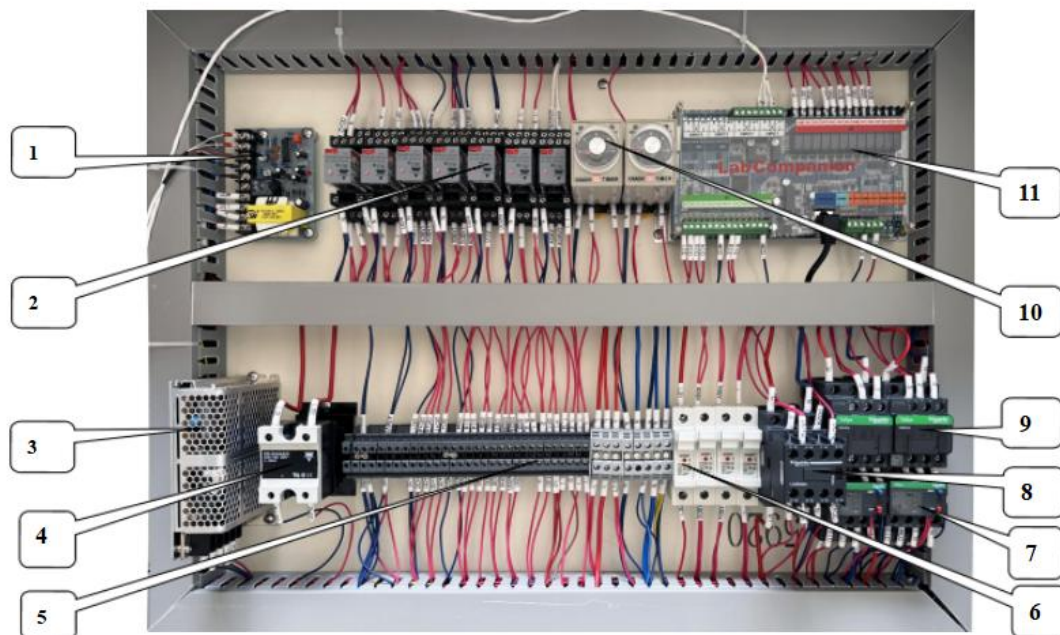

Number	Name	Number	Name
1	Overheated plate	7	Thermal overload relay
2	Intermediate relay	8	Auxiliary contact
3	Dc power supply	9	Ac contactor
4	Solid state relay	10	Time relay
5	Connector terminal	11	Temperature controller
6	Fuse		

Lab Companion

Test Report:

Temperature Sensor °C	-60°C	-40°C	-20°C	0°C	40°C	85°C	125°C	150°C
1	-59.2	-39.8	-20.1	0.5	40.1	85.6	125.7	150.2
2	-59.6	-40.0	-20.4	0.8	40.5	85.2	125.3	150.7
3	-59.9	-40.3	-20.5	0.4	40.7	85.0	125.5	150.4
4	-59.4	-40.5	-20.7	0.8	40.3	85.4	125.8	150.2
5	-59.7	-40.2	-20.9	0.9	40.6	85.7	126.0	150.6
6	-60.0	-40.0	-21.0	1.0	40.8	85.9	125.9	150.9
7	-60.2	-39.7	-21.2	1.2	41.0	86.0	125.7	151.0
8	-60.4	-39.9	-20.9	1.5	41.3	86.2	126.0	151.1
9	-60.1	-40.0	-20.5	1.7	41.0	86.0	125.8	150.9
Temperature deviation	0.8	0.5	1.2	1.7	1.3	1.2	1.0	1.1
Temperature uniformity	1.2	0.8	1.1	1.3	1.2	1.2	0.7	0.9